

## VIP-Control link VCG 6

Artikel-Nr: 7987623



The side of the VCG with the inscription of the Target dimensions "soll...mm " should face the front. When fitting the VCG - control link, it has to first of all be mounted on to the bracket of the coupling link VVS and then on to the third link of the VIP chain. Use only RUD original components. **The assembly should be realised with a bypass Connection.**


1. Coupling link VVS-U - Easy fitting using a hammer
2. Control link VCG - With indicator bars and a calibrated slot width (nominal ...mm)
3. VIP chain, 3 links - Additional safety element in the bypass connection besides the control link
4. Coupling link VVS-U - Easy fitting using a hammer

If the two indicator bars have not been closed after an overload (slot width >0,5mm), the user may install a new control link. Should the same overload indications occur again, a bigger chain size has to be used. If the bars are closed or even deformed due to contact with each other, the chain has to be removed and examined according to BGR 500.

## VIP-Control link VCG 6

Artikel-Nr: 7987623

Nur mit Bypass verwenden !

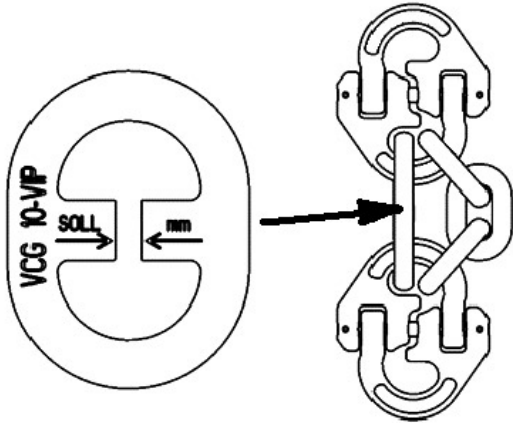

<b>weight</b>	0.06 kg	0.13 lbs
<b>Nominal WLL</b>	1500 kg	3300 lbs
<b>T</b>	35.0 mm	1-3/8"
<b>A</b>	4.0 mm	5/32"