


## IMVK – Use

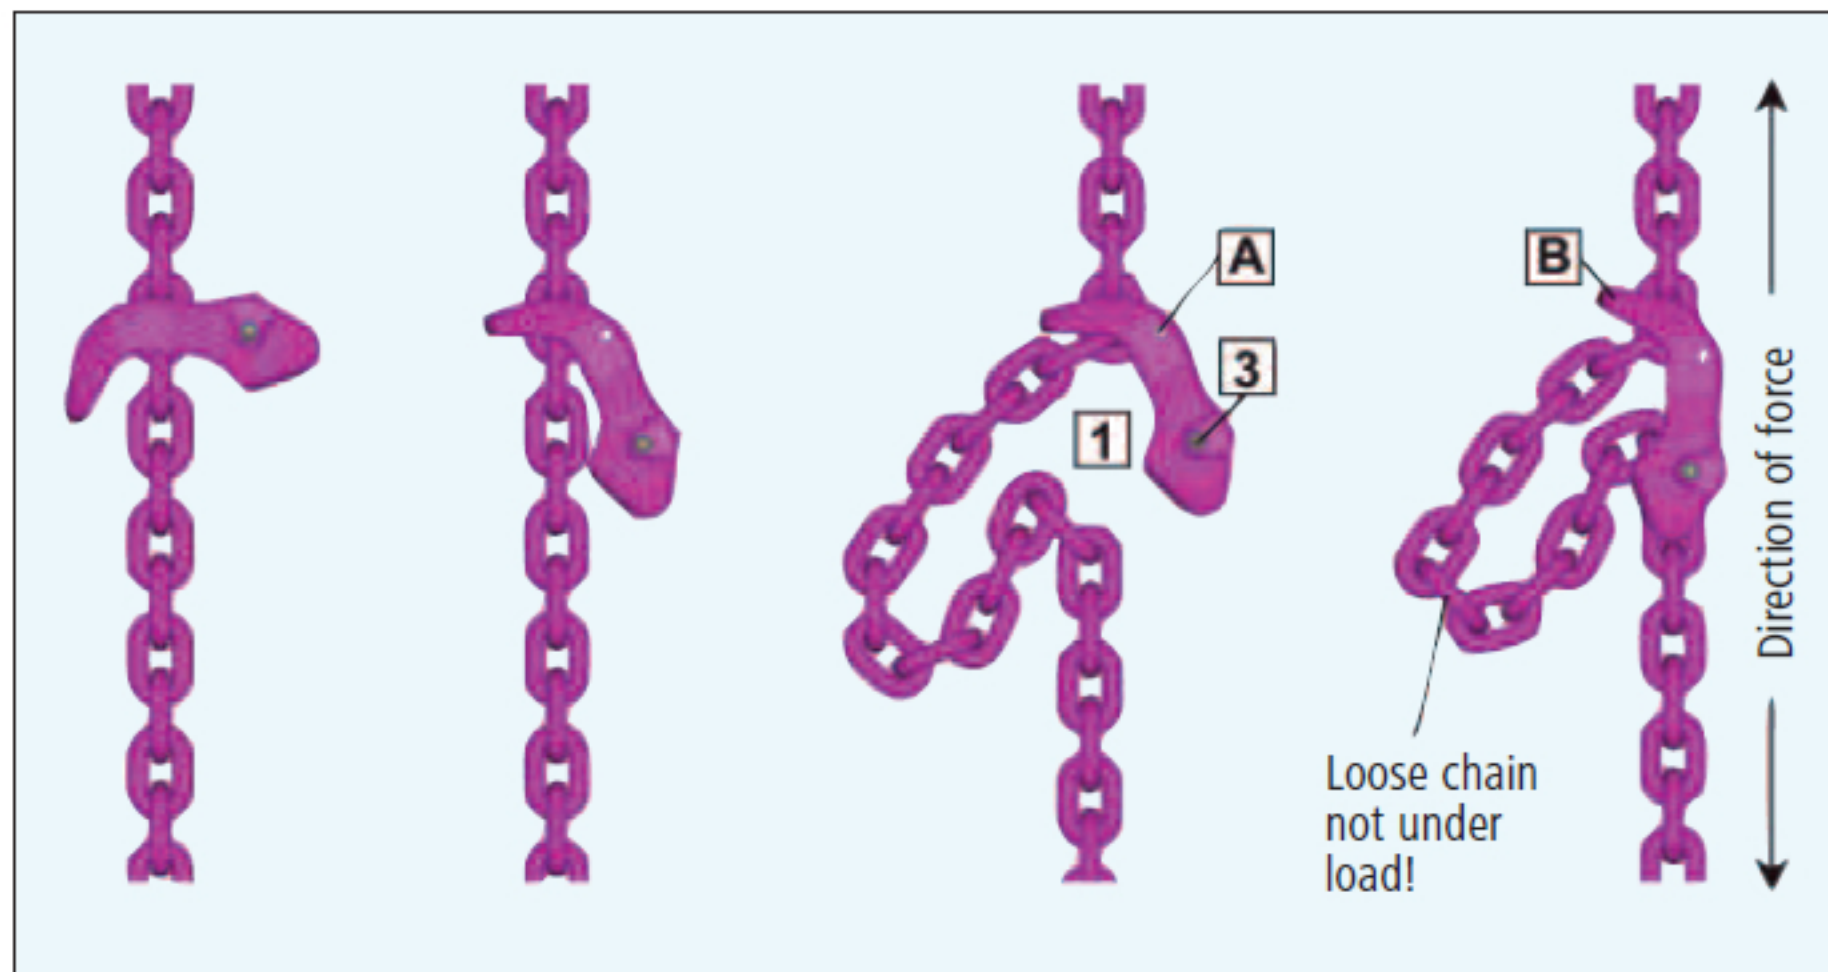

1. Attach loose chain strand through cross of IMVK and secure by hammering the sleeve pin **A** in.
2. When chain is unloaded, position chain link into pocket **1**, press securing knob **3** and pull chain down.
3. Release securing knob and control locking.
4. Release, backwards (securing knob **3** must be pushed).

**Attention:** When IMVK is used without securing pin **A**, chain must be always totally engaged into the locking groove **B**. When pulling/lifting the shortened chain assembly attention must be paid to ensure that the chain remains in the locking slot!